


# Instructions to Remove or Replace Slide Mount Aero-Caster




**STEP 1:** Approach Slide-Mount Load Module from air hose connector side, as shown below. The slide mount Aero-Caster can be replaced with the load module either loaded or unloaded.

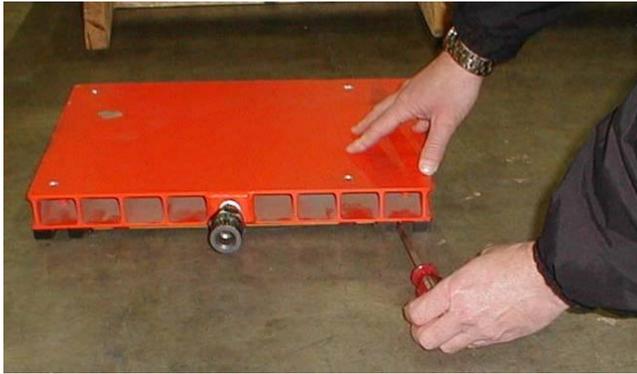

**STEP 2:** Be sure to disconnect air from the Load Module/Air Caster Rigging System prior to removing or replacing the Aero-Caster. Have a flat screwdriver and your slide-mount removal tool ready.



**STEP 3:** Insert flat screwdriver into slide lock opening and **move slide lock away from center**. There is normally one slide lock per side, two slide locks per module total.

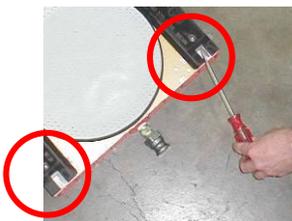

**NOTE:** Slide locks are located on the air connection side of the Load Module. From this underside view you can better see the slide lock positions. Slide locks are circled in red in photo.



**STEP 4:** Insert the flat screwdriver and pry the lock away from the Aero-Caster to open on either side. Picture shows the underneath close-up view of the slide lock in its locked position. Locked position is toward the center of the Aero-Caster.



**STEP 5:** Using slide-mount removal tool, insert tool end into hole in corner of slide-mount caster base. Gently pull caster towards you.

**STEP 6:** Insert the replacement Aero-Caster so that the inlet location hole is towards the outside of the module (closest to you) to ensure air caster will inflate. Push slide locks toward center to secure caster.

**STEP 7:** Return the Module to the standard operating position with air caster against the floor. Inflate the air caster briefly to ensure proper operation.

**Caution:** When inflating air caster with bag facing up, wear safety goggles. Possible eye damage may occur.



## Reading Aero-Caster Tags:

1. Air caster model number = 12NSM; use this number for ordering replacements.
2. Serial Number is OC893-66
3. Capacity (CAP: 1.25T @ 30 Psi or 1134Kg @2.1 Kg/cm<sup>2</sup>) of air caster at recommended air rating in English and Metric units
4. AeroGo contact information
5. If additional tags are present on caster, Aero-Caster number is needed for reordering